tapflo

AIR OPERATED DIAPHRAGM PUMPS

All about your flow

www.tapflo.com

Contents



About Tapflo Tapflo Diaphragm pumps

Working principle Fast facts Features & Benefits How to install Tapflo pumps Key components of the Tapflo pump Applications



PE & PTFE series

General Typical applications The ingenious Tapflo design Special versions Performance curves Dimensions Technical data Pump code



Metal series

General Typical applications The ingenious Tapflo design Special versions Performance curves Capacity changes Dimensions Technical data Pump code



Sanitary series

General Typical applications The sanitary design Special versions Performance curves Capacity changes Dimensions Technical data Pump code



4

5

6

8

10

10

10

11

12

14

15

16

16

17

17

17

18

19

21

21

22

23

23

24

24

24 25

26

27

27

28

28

28

Aseptic series

29

	General	29
	Typical applications	29
	Features & Benefits	29
	Performance curves	30
	Dimensions	30
	Technical data	30
	Intelligent pumps - TC series	31
0	General	31
-	Features & Benefits	31
	0 0 0 0 0 0 0 0 0 0	
1	Filter press pumps - TF series	32
	General	32
	Features & Benefits	32
	The installation	32
	Technical data	32
	Powder pumps - TP series	33
	General	33
	Features & Benefits	33
	Working principle	33
	Technical data	33
	Pharmaceutical pumps - TU series	34
	General	34
	Features & Benefits	34
		51
	Active pulsation dampeners	35
	General	35
	Working principle	35
	Options & accessories	35
	Dimensions	36
	Dampener code	36
	Dampener code	50
	Systems & accessories	37
	Guardian systems	37
	Control systems	38
2	Mobile solutions	38
	Filter regulator & needle valve kit	39
	Pneumixer	39
U	Contact	39 40
	CUIILACL	40

> All about your flow

We began our journey in 1980 in Kungälv, a small town on the Swedish west coast, as a family company with an ambition to one day become a global player on the pump market.

Since the foundation, we have taken pride in delivering a wealth of knowledge and passion for pumps to the industry, whilst supplying a wide range of premium products for various industrial applications.

Over the years, the company has developed into a global Tapflo Group with branches and distributors present in nearly every region of the world.

One thing did not change - we are still a family company.

Our solutions are designed and manufactured in Europe and distributed globally to offer the best service and flow solutions to our customers for a variety of applications.

Our values, Commitment, Quality and Simplicity are reflected both in our product and business approach.



For fast and flexible service and high-quality products readily available worldwide, choose Tapflo.

Quality commitment

At Tapflo we are simply committed to quality. As a result, our production standards, as well as products quality, comply with various globally recognised certification and quality control standards. The Tapflo manufacturing process is certified according to ISO 9001:2015, confirming that our processes are appropriate, effective, customer-focused and continuously improved.



Tapflo values

Our culture is concluded in Our values

Commitment

We are different from our competitors because of our willingness to exceed the customers' expectations, move fast and be flexible. Our culture is based on the spirit of togetherness, enthusiasm and integrity. We come from all over the world but we share the same values and we respect each other. We are committed.

Quality

We understand that the quality in our work is never better than the weakest link, that's why we focus on every small detail. We share a common passion for continuously finding more efficient and effective ways to provide value to our customers. As a manufacturer we have control of the complete process both in terms of our products and the way we operate internally. That is why we manufacture the highest quality pumps in our segment.

Simplicity

We have a saying, "Simple is art" which means we try to find smooth and uncomplicated solutions in everything. By keeping it simple we can focus on the essential, like designing uncomplicated pumps with few components. For us it is a key to success; strive to simplify what is complex.

Diaphragm pumps most versatile pumps on the market


Working principle

Tapflo diaphragm pump is driven by compressed air. Two diaphragms are working simultaneously to prime and push the liquid through the pump system. Valve balls work as check valves to let the liquid through in the right direction.

During each cycle the air pressure on the back of the discharging diaphragm is equal to the head pressure on the liquid side. Tapflo diaphragm pumps can therefore be operated against a closed discharge valve with no adverse effect to the life of the diaphragms.

Suction

One diaphragm creates a suction action when being pulled back from the housing.

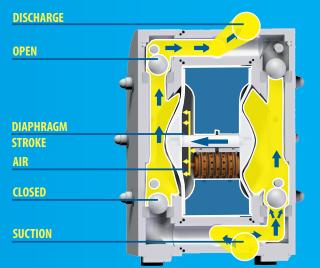

Discharge

The other diaphragm simultaneously transmits the air pressure to the liquid in the housing, pushing it towards the discharge port.

Fast facts		
Capacity	0-820 l/min	Pump materials
	0 - 216 US gal/min	PE, PTFE, aluminiur
Pressure	0 - 8 bar (max 16 bar for TF series)	and PTFE coated al
	0 - 116 PSI (max 232 PSI for TF series)	
Connection sizes	1/4″ up to 4″ (DN8 - DN100)	

m, cast iron, stainless steel AISI 316L, luminium

Features & Benefits



Run dry without damage Easy to use, no need of guarding device



Thorough flow control Flexible and easy to adjust



Self-priming up to 5 m from dry suction pipe More options of installation



No electricity needed Explosion proof versions Ex-zone 1 (ATEX group II, cat 2)

Ex-zone 0 (ATEX group II, cat 1)

Few components & long life design Low downtime and maintenance cost

Wide range of working pressures 0-16 bar

Solid, strong construction

(depending on pump series)



Lubrication free air distribution system Saves the environment from pollution



Air operated


Can operate against closed valve. Easy to install without special training (no electricity)

How to install Tapflo pumps

Tapflo Pumps are flexible and easy to install. The in- and outlet ports can rotate 180° to fit your piping system (PE & PTFE and metal series pumps).

Flooded

The piping system is designed with a positive suction head. This is the best way of installation where it is necessary to completely evacuate all liquid from the container, or where viscous (thick) products are transferred.

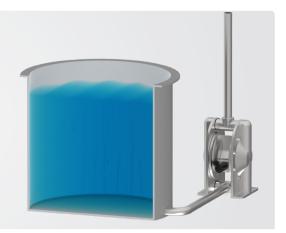


Self-priming

The Tapflo pump is designed to pull a high vacuum. It is able to evacuate an empty suction pipe without any damage to the pump. The suction lift is up to 5 meters (16.4') from an empty suction pipe and up to 8 meters (26.2') from a wetted pipe. The suction capability depends on the pump size (see pages 16, 23, 28).



Submerged

All Tapflo pumps may be submerged into the liquid. It is important to make sure that all components which are in contact with the liquid are chemically compatible. The air exhaust must be led to the atmosphere by means of a hose.

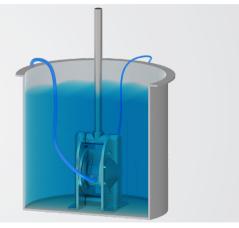

Key components of the Tapflo pump

Long life diaphragms

Tapflo diaphragms are of composite construction, superior for continuous heavy duty service, with a completely smooth surface in contact with the liquid. This results in no leak through and a diaphragm which is easy to keep clean.

The diaphragms are available in various materials and colours to suit any requirements, they are made from **EPDM, NBR, FKM, PTFE, PTFE TFM 1705b, EPDM white, PTFE** with **white EPDM back, NBR white**.



Multilayer Design

An advanced process of preforming, curing, trimming and finishing results in a long life composite diaphragm that will last for many millions of cycles. All compounds are specially developed and optimized for composite diaphragm technology and compression molding production. Components are chemically bonded by bonding agents and adhesives.

(1) PTFE TFM layer | (2) Front layer | (3) Core (metal)
(4) Fabric | (5) Back layer


Energy saving drive

The air value is the driving heart of the pump, redirecting the compressed air to the chambers behind the diaphragms. The air value is placed in the centre of the pump between the diaphragms, to minimize air ways and dead volumes. This all together is the key to a reliable and energy saving drive.

It is made for maintenance free duty with no lube air, thanks to the ingenious sealing system. It will not only save your money for lubrication, it will also protect environment from pollution.

The valve body is made from **brass** or optional **PET** or **stainless steel AISI 316L**.



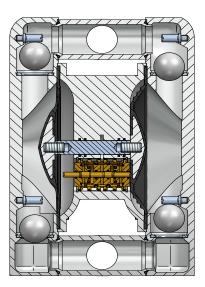



Ball check valves

The Tapflo pump is fitted with four check valves, making sure that the liquid is transferred in the right direction through the pump.

The ball type valve is the most simple and reliable valve design. It has a good sealing capability and is easy to keep clean and to replace if necessary.

The ball valve materials are available in **EPDM**, **NBR**, **PTFE**, **PTFE TFM 1635**, **PE1000**, **FKM**, **PU**, **Ceramic**, **SiC**, **AISI 316L** to suit any kind of liquid.

Flap valves (Sanitary pumps)

Flap valves are used for pumping liquids containing big solids without damage. Tapflo flap valve pumps are able to pump solids up to **18 mm** in **T80** and **T125**, **42 mm** in **T225** and **T425** and **95 mm** in **T825** pump size. Pumps can reach dry suction lift up to 4,5 meters. Tapflo Flap Valve design has only two components and are hygienic thus easier to clean.

Magnetic ball lifters (Sanitary & Aseptic pumps)

Possibility to drain the pump is crucial in most hygienic applications. The ball lifting system from Tapflo could not have been easier.

Magnetic ball lifters are implemented in Sanitary and Aseptic series AODD pumps, to enable pump emptying without removing it from the installation when no other draining option is available. Rotating the pump is no longer needed.

Working principle

The valve balls, either made of AISI 420 or PTFE with steel core, are lifted by an influence of magnetic field generated by the ball lifting device. The ball lifting operation is made simply by attaching the magnets to the pumps manifolds.

7









Applications

Various liquids - Tapflo pumps are compatible with a very wide range of chemicals:

- >> Corrosive and chemical aggressive
- >> High and low viscous
- >> Abrasive
- Solid content
- >> Shear sensitive
- >> Flammable



Chemical industry

Transfer of all kind of acids, alkalis, alkohols, solvents and shear sensitive products such as latex and emulsions, as well as chemical waste products.

Surface treatment

Transport of chemicals from storage tanks, containers and baths, for example in pickling, galvanization and degreasing. Handling of waste products.



Water treatment

Pumping samples, dosing acids and alkalis for pH-control. Transfer of flocculent, suspensions, chemical reagents and sludges. Pumps are resistant to even most aggressive chemicals.





Transfer of products like: soup, cream, syrup, milk, yoghurt, spirit, chocolate, dough, cream, paste, flavours, aromas, toothpaste etc.



Mechanical industry

Handling of oils, fats, lubricants, cooling liquids, washing and cleaning liquids, solvents, waste products etc.

Paint, print and varnish industry

Transfer of water- and solvent based paints, inks, varnishes, glues adhesives and solvents. Transfer, recirculation and blending of inks in printing industries.

PE & PTFE series >> General | Typical applications

PE & PTFE series pumps

Tapflo pumps made from polyethylene (PE) or polytetrafluoroethylene (PTFE) are suitable for handling almost any kind of liquid whether it is viscous, chemically aggressive or with solids.



Polyethylene pumps

Polyethylene (PE HD) has a superior wear resistance which is 6 – 7 times better than for polypropylene (PP). This fact makes the pump suitable for handling abrasive slurries etc. PE is resistant to most kind of aggressive chemicals such as concentrated acids and alkalis. Maximum liquid temperature is 70°C. Tapflo uses different grades of PE depending on the part. For valve seats and ball stoppers, which are most vulnerable to wear - UHMW PE1000 is used for best mechanical strength and abrasion resistance.

PTFE pumps

PTFE (virgin polytetrafluorethylene) is a thermoplastic polymer with superior chemical resistance. The PTFE pump can handle even the most aggressive acids. Maximum liquid temperature is 110°C.





The PE & PTFE pump range

» TR9 - 11 l/min, 1/4"
>> TR20 - 24 l/min, 3/8"
≫ T50 - 60 l/min, 1/2"
≫ T100 - 125 l/min, 1″
>> T200 - 330 l/min, 1 1/2
≫ T400 - 570 l/min, 2"
>> T800 - 820 l/min, 3"



Typical applications

Industry	Example of applications
>> Chemistry	Acids, alkalis, alcohols, solvents, emulsions
>>> Food	CIP liquids, flavours, pigments
>>> Pulp & Paper	Glue, slurries, adhesives, dispersions, resins, sodium silicate, titanium oxide
Surface treatment	Acids, solvents, anodic sludge, varnish, enamels
>> Water treatment	Sludge handling, filter press applications, neutralization and flocculants
>>> Electronics	Carrier fluids, ultra-pure liquids, electroplating solutions, mercury, solvents
>> Print & paint	Glue, additives, varnish, ink, paint, latex, acid, resins, pigments

The ingenious Tapflo design

Few components and a simple design are common for all Tapflo pumps. The pumps are compact, easy and quick to maintain, keeping your service costs and process down time to a minimum.

Flexible installations

The connections may be rotated 180°. Simply turn the connections to fit your piping system. BSP and NPT threaded connections as standard, AISI 316L optional material or other connection types are available as an option. AISI 316 or other connections types are also available.

Solid and strong

The pump body is machined from solid PE or PTFE. The robust design will stand against mechanical forces as well as aggressive chemicals.



Low air consumption

The air distribution system is designed to ensure the shortest possible airflow path and eliminate dead volumes. This results in high efficiency and low air consumption.

Chemical design

The compound diaphragm has a completely smooth liquid side surface and with no metal in contact with the pumped liquid. Ideal for a safe chemical handling.

PE

PE pumps - suitable for most chemicals and abrasive liquids **PTFE pumps** - suitable for the most aggressive chemicals

Special versions



Drum pumps | TD series

Light and mobile solution for emptying drums and containers Tapflo TD pumps are irreplaceable in such applications.

The pumps are fitted with a drum tube in polypropylene (PP) or PTFE and a handle in AISI 316L stainless steel.

The PE & PTFE drum pumps range

- >> TRD20 24 l/min, 1/2" suction, 3%" discharge
- >> TD50 60 l/min, ³/₄" suction, ¹/₂" discharge
- >> TD100 125 l/min, 1 ¼" suction and 1" discharge

Features & Benefits

Customizable tube length The drum tube is delivered in any length up to 2 m

Highly mobile and versatile

Pumps can be easy moved between different drums and containers



Handy and convenient

Compact pump equipped with comfortable handle



Integrated heavy duty flanges | 3D/3A

The robust design of integrated flanges proves itself useful when there is a risk of vibration from the installation. The solid manifolds provide better stability and sealing for the pump.

This design is a perfect solution for most demanding applications such as in TF Filter press pumps where pump operates at higher pressures.

- **Available for sizes:** TR20, T50, T100, T200, T400
- >> Available materials: PE, PE cond., PTFE, PTFE cond.
- Flange standard 3A = ANSI flanges 3D = DIN flanges

Special versions







Tapflo TX ATEX classification: Ex II 2G Ex h IIC T6...T4 Gb Ex II 2D Ex h IIIC T60°C...T125°C Db

 Tapflo TZ ATEX classification:

 Ex II 1G Ex h IIC T6...T4 Ga



Pump with built-on dampener | TK series

The built-on dampener is an ideal solution to eliminate pressure variations on the pumps discharge where space in the installation is limited.

Available for sizes: TRK20, TK50, TK100, TK200


Twin pumps | TT series

Tapflo PE & PTFE series pumps may be fitted with double in/outlet to achieve "two pumps in one" for blending, mixing or recirculation of liquids.

The liquid in one pump chamber is separated from the other one.

Examples of applications

- Mixing of two liquids with one pump (50/50 ratio) (installation example)
- Transfer and return of printing ink from storage to ink tray
- Transfer and agitation of liquids with one pump

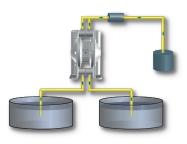

Explosion proof pumps | TX series

The ATEX directive 2014/34/EU (also known as ATEX 114) is applicable on products used in explosion hazardous zones.


Tapflo pumps made from conductive (carbon filled) plastics PE or PTFE are made for use in explosion hazardous environments. They can be used in Ex-zone 1 and Ex-zone 0. The conductive material ensures that no electrostatic loads will be accumulated in the pump.

The conductive pigment in the material reduces the surface resistance. Transfer of alcohol and solvents are examples of applications for the Tapflo TX and TZ pumps.

Performance curves


The performance curves are based on water at 20°C. Other circumstances might change the performance. **Example** see the red line ----

A flow of 6 litre/minute is desired. The discharge head is calculated to 30 mWC. We choose a TR9. It requires an air pressure of 6 bar and will consume approximately 0.10 Nm³/minute.

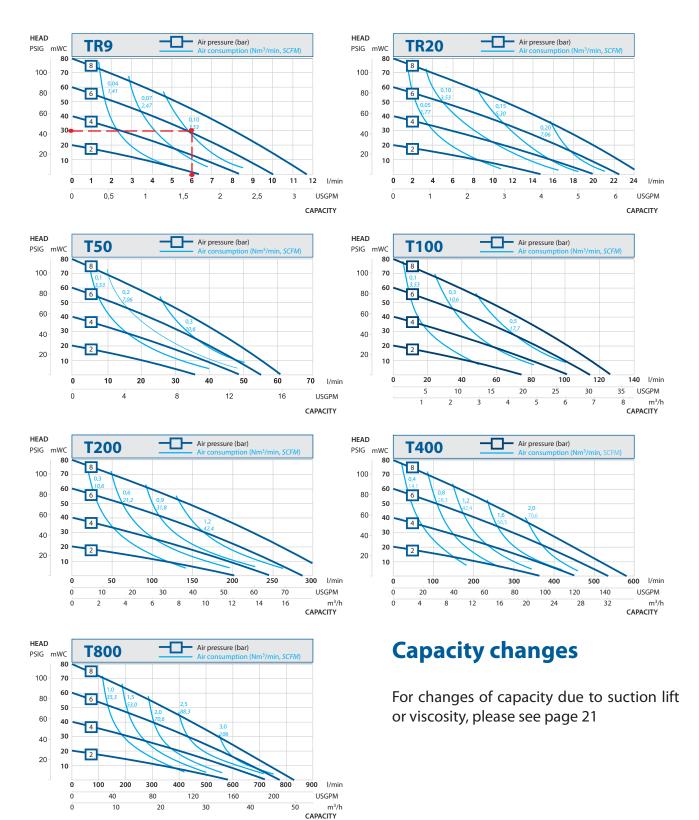



Changes reserved without notice

Dimensions Standard PE pumps





Standard PTFE pumps

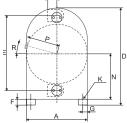





Drum pumps TD

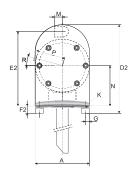

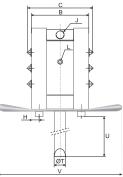



Twin pumps TT

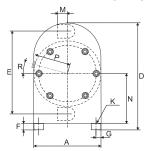



Filter press pumps TF

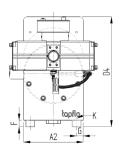

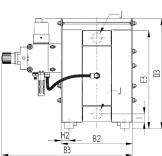

Dimensions for PE & PTFE series

Dimensions in mm (where other is not indicated) Dimensions in inch (where other is not indicated)

			l	oump size	e			
Dim	9	20	50	100	200	400	800	
٨	70	105	150	200	270	350	460	
A	2.76	4.13	5.91	7.87	10.63	13.78	18.11	
4.2	-	-	150	300	300	404	-	
A2	-	-	5.91	11.81	11.81	15.91	-	
D	94	113	162	216	313	382	557	
В	3.70	4.45	6.38	8.50	12.32	15.04	21.93	
B2	-	-	168	224	324	392	-	
DZ	-	-	6.61	8.82	12.76	15.43	-	
B3	-	-	262	415	595	670	-	
05	-	-	10.31	16.34	23.43	26.38	-	
B4	134	152	202	256	352	422	-	
DT	5.28	5.98	7.95	10.08	13.86	16.61	-	
С	116	134	185	252	350	426	601	
C	4.57	5.28	7.28	9.92	13.78	16.77	23.66	
D	123	168	243	320	450	563	830	
U	4.84	6.61	9.57	12.60	17.72	22.17	32.68	
D2	-	173	249	325	-	-	-	
02		6.81	9.80	12.80	-	-	-	
D3	-	-	352	351	501	583	-	
05	-	-	13.86	13.82	19.72	22.95	-	
D4	-	-	343	364	500	610	-	
04	-	-	13.50	14.33	19.69	24.02	-	
Е	92	132	190	252	345	440	650	
L	3.62	5.20	7.48	9.92	13.58	17.32	25.59	
E2	-	147	210	280	-	-	-	
LZ	-	5.79	8.27	11.02	-	-	-	
E3	-	-	244	319	447	588	-	
ED	-	-	9.61	12.56	17.60	21.97	-	
F	8	8	15	15	30	30	30	
Г	0.31	0.31	0.59	0.59	1.18	1.18	1.18	
F2	-	13	20	20	-	-	-	
12	-	0.51	0.79	0.79	-	-	-	
G	9	15	17	30	30	30	20	
G	0.35	0.59	0.67	1.18	1.18	1.18	0.79	
н	10	15	16	30	30	30	30	
	0.39	0.59	0.63	1.18	1.18	1.18	1.18	
H2	-	-	19	34	35	35	-	
112	-	-	0.75	1.34	1.38	1.38	-	
H3	30	35	36	50	50	50	-	
115	1.18	1.38	1.42	1.97	1.97	1.97	-	
1	12	15	20	28	38	48	80	
•	0.47	0.59	0.79	1.10	1.50	1.89	3.15	
J	1/4″	3/8″	1/2″	1″	1 1/2″	2″	3″	
J	1/4	3/8	1/2	1	1 1/2	2	3″	
J2	1/4″	3/8″	1/2″	3/4″	1″	1 1/2″	-	
72	1/4	3/8	1/2	3/4	1	1 1/2	-	
к	M4x16	M4x16	M8x25	M8x25	M8x25	M8x25	M8x25	
K	M4	M4	M8	M8	M8	M8	M8	
L	1/8″	1/8″	1/4″	1/4″	1/2″	1/2″	1/2″	
L	1/8	1/8	1/4	1/4	1/2	1/2	1/2	
М	15	17	25	38	54	70	105	
101	0.59	0.67	0.98	1.50	2.13	2.76	4.13	
N	58	81	115	154	211	268	411	
IN	2.28	3.19	4.53	6.06	8.31	10.55	16.18	
Р	35	52	80	105	143	183	237	
r	1.38	2.05	3.15	4.13	5.63	7.20	9.33	
R	0°	0°	15°	15°	0°	0°	0°	
n	0°	0°	15°	15°	0°	0°	0°	
S	13	15	21	27	35	42	-	
د	0.51	0.59	0.83	1.06	1.38	1.65	-	
ØТ	-	20	32	32	-	-	-	
<i>w</i> i	-	0.79	1.26	1.26	-	-	-	
11	-	1170*	1170*	1170*	-	-	-	
U	-	46.06*	46.06*	46.06*	-	-	-	
V	-	286	360	401	-	-	-	

* = Any length up to 2000 mm upon request * = Any length up to 79" upon request

General dimensions only, ask us for detailed drawings. Changes reserved without notice

Technical data

	Pump size										
Data	9	20	50	100	200	400	800				
General characteristics		·		· ·		·					
*Max capacity (l/min) / (US gpm)	11 / 2.9	24 / 6.3	60 / 15.8	125 / <mark>33</mark>	330 / <mark>87</mark>	570 / 1 <mark>50</mark>	820 / <mark>216</mark>				
**Volume per stroke (ml) / (cu in)	15 / <mark>0.9</mark>	26 / 1.6	116/7.1	305 / 18.6	854 / 52.1	2326/141.9	5240/319.8				
Max discharge pressure (bar) / (psi)	8 / 116	8/116	8 / 116	8 / 116	8/116	8 / 116	8 / 116				
Max air pressure (bar) / (psi)	8 / 116	8/116	8 / 116	8/116	8/116	8/116	8/116				
*****Max suction lift dry (m) / (Ft)	1.6 / 5.25	2.4 / 7.87	4 / 13	3.5 / 11	4/13	4/13	5 / 16				
Max suction lift wet (m) / (Ft)	8 / 26	8 / 26	9/ 29.5	9/ 29.5	9/ 29.5	9/ 29.5	9/ 29.5				
Max size of solids (ø in mm) / (in)	2 / 0.08	3/0.12	4/0.16	6/ <u>0.24</u>	10 / <mark>0.39</mark>	15 / <mark>0.59</mark>	15 / <mark>0.59</mark>				
Max temp, pump in PE (°C) / (°F)	70 / 158	70 / 158	70 / 158	70 / 158	70/158	70/158	70/158				
Max temp, pump in PTFE (°C) / (°F)	100/212	100/212	100 / 212	100/212	100 / 212	100/212	-				
Weight											
Standard pump T in PE (kg) / (lb)	0.75 / 1.65	1.6 / <mark>3.53</mark>	4.3 / 9.48	10/22	25 / 55.12	47 / 103.62	147 / <mark>342</mark>				
Standard pump T in PTFE (kg) / (lb)	1.35 / 2.98	3.15 / 6.94	9 / 19.84	17 / <mark>38</mark>	47 / 103.62	87 / 191.80	-				
Drum pump TD in PE (kg) / (lb)	-	2.4 / 5.29	4.7 / 10.36	10.5 / 23.15	-	-	-				
Drum pump TD in PTFE (kg) / (lb)	-	3.9 / <mark>8.6</mark>	9.4 / 20.72	17.5 / 38.58	-	-	-				
Filter press pump TF in PE (kg) / (lb)	-	-	8/17.64	21.6 / 47.62	30 / 66.14	70/154.32	-				
Material of components											
Pump housing and all wetted thermoplastic details		PE, P	PE conductive, P	TFE, PTFE condu	uctive		PE, PE conductive				
Centre block (not wetted)			PP, PE	conductive, alu	minium						
Diaphragms	PTFE, FKM		Р	TFE, PTFE 1705B	, EPDM, NBR, FI	٢M					
Valve balls	-		PTFE, EP	DM, NBR, AISI 31	6L***, PU, Cera	mic***, FKM					
Rod valves (TR9 and TR20)	PE, I	PTFE	-	-	-	-	-				
Air valve	Body: brass (std.), stainless steel AISI 316L or PET O-rings: NBR (std.), EPDM or FKM										
O-rings (wetted)	PTFE, EPDM, FKM, FEP/FKM										
Housing pin screws				Stainless steel							
Diaphragm shaft		Stainle	ess steel AISI 31	6L (TR9, TR20, T8	300) / 304L (T50	–T400)					
Drum handle (TD pumps)	-	Stai	inless steel AISI	316L	-	-	-				
Reinforcement plates (TF pumps)	-	-		Stainless st	eel AISI 304		-				

* = Recommended flow is half of the max flow, i.e. recommended flow for a T100 is 62 l/min (16.3 US gpm)


** = The value is based on pumps with PTFE diaphragms (other materials - please contact Tapflo). It should be remembered that the volume per stroke may vary depending on the pump's operating parameters.

*** = Not available on T800

**** = This is max value with stainless steel valve balls, other valve ball materials may reduce the suction. Please consult us

Pump code

The model number on the pump tells the pump size and material of the pump components

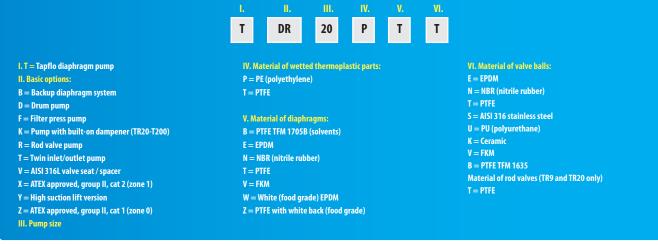

* = Ask us for complete pump code with all available options and executions. Changes reserved without notice

Metal series pumps

The compact, smooth and simple design is common for this series. Materials available are aluminium, cast iron, stainless steel and PTFE coated aluminium.



Aluminium and cast iron pumps

For transfer of pH-neutral fluids, both thin, thick, high solid content or abrasive. The aluminium and cast iron pumps are found in most fields; workshop and paint industries, purifying plants etc., to mention only a few.

AISI 316 stainless steel pumps

Made in lost wax cast method, ensuring great accuracy and finish. The stainless steel pumps combine great mechanical strength with good chemical features. AISI 316 is resistant to aggressive liquids like nitric acid and sodium hydroxide. The centre block, which is not in contact with liquid, is made from corrosive resistant polypropylene (PP) as standard (other materials upon request).









The metal pump range ≫ T25* - 26 l/min, 1/2" ≫ T70 - 78 l/min, 3/4" ≫ T120 - 158 l/min, 1" ≫ T220 - 330 l/min, 1 1/2" ≫ T420 - 570 l/min, 2" ≫ T820 - 820 l/min, 3" * = aluminium and cast iron only

Typical applications

Industry	Example of applications
>> Workshop	Oils, fats, solvents, water, cooling fluids, lubricants
>> Print & paint	Glues, additives, varnishes, inks, paints, latex, acids, resins, pigments
Mining & construction	Adhesives, sumps, dewatering, coal sludges, pastes
>> Ceramic industry	Abrasives, glazes, water, enamels, clays
>> Chemistry	Acids, alkalis, alcohols, solvents, latex, emulsions

The ingenious Tapflo design

You will discover and appreciate simplicity when you maintain the pump. We use approximately **70% fewer parts compared with other brands.**

Optional Camlock connections

Metal series diaphragm pumps can be ordered with CAMLOCK connections. The coupling is connected by simply opening the coupler arms and inserting the adaptor into the coupler.

Durable valve seats

The valve seat is under constant stress from the movement of the valve ball. To obtain the best wear resistance, the integrated seat is made from AISI 316 stainless steel.



Flexible installations

The connections may be rotated 180°. Simply turn the connections to fit your piping system. Threaded BSP or NPT connections are standard. Twin connections are also available.

Low air consumption

The air distribution system is designed to ensure the shortest possible airflow path and eliminate dead volumes. This results in high efficiency and low air consumption.



Aluminium and cast iron - suitable for pH neutral liquids Stainless steel - suitable for chemicals and food applications

Special versions



Drum pumps | TD series

Light and mobile solution for emptying drums and containers Tapflo TD pumps are irreplaceable in such applications.

The pumps are fitted with a drum tube in aluminium or stainless steel and a handle in AISI 316L stainless steel.

The Metal drum pumps range

- >> TXD25 26 l/min, ½" suction and discharge
- >> TXD70 78 l/min, 3/4" suction and discharge
- TXD120 158 l/min, 1" suction and discharge

Features & Benefits

\checkmark	

Customizable tube length The drum tube is delivered in any length up to 2 m

Highly mobile and versatile

Pumps can be easy moved between different drums and containers

Handy and convenient

Compact pump equipped with comfortable handle



Pneumatic drainage

To ensure process automation Tapflo has developed a pneumatic drainage system. Thanks to this feature, the pump can be drained without detaching from the installation.

>> Available for sizes: T120 | T220 | T420



Ball lifters TL

This option is a great way to empty the pump of liquid if there is no possibility of pump disconnection from the installation.

With this easy solution you can simply raise the ball from the valve seat and allow the liquid to flow out of the pump.

>> Available for sizes: T70 | T120 | T220 | T420

Special versions





Pump with built-on dampener | TK series

The built-on dampener is an ideal solution to eliminate pressure variations on the pumps discharge where space in the installation is limited.


```
Available for sizes: TXK25, TXK70, TXK120,
TXK220, TXK420;
```

Twin pumps | TT series

Tapflo metal series pumps may be equipped with double in/ outlet to achieve "two pumps in one" for blending, mixing or circulation of liquids. The liquid in one pump chamber is separated from the other one.

Examples of applications

- Transfer of two different liquids, two pumps in one
- Mixing of two liquids with one pump (50/50 ratio)
- Transfer and return of printing ink from storage to ink tray
- Transfer and agitation of liquids with one pump (installation example)

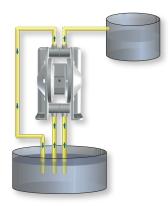



Tapflo TX ATEX classification:Ex II 2G Ex h IICT6...T4 GbEx II 2D Ex h IIICT60°C...T125°C Db

 Tapflo TZ
 ATEX classification:

 Ex II 1G Ex h IIC T6...T4 Ga



Explosion proof pumps | TX series

The ATEX directive 2014/34/EU (also known as ATEX 114) is applicable on products used in explosion hazardous zones. All aluminum and cast iron pumps are by standard ATEX approved and permitted to be used in Zone 1, having model names TX...

The standard stainless steel pumps are not allowed to operate in hazardous environments. Special conductive TX and TZ pumps are available for such applications. All plastic parts utilized in such pumps are made from conductive (carbon filled) materials thus made for use in explosion hazardous environments. What is more ATEX pump are equipped with a grounding connection.

The aluminium and cast iron pumps can be used in Ex-zone 1. Stainless steel pumps can be utilized in Ex-zone 1 and Ex-zone 0.


The conductive material ensures that no electrostatic loads will be accumulated in the pump.

Performance curves

The performance curves are based on water at 20°C. Other circumstances might change the performance. See below how the capacity will change at different viscosities and suction lifts. These curves are valid for all metal pumps.

Example see the red line — — —

A flow of 10 litre/minute is desired. The discharge head is calculated to 20 mWC. We choose a T25. It requires an air pressure of 4 bar and will consume approximately 0.10 Nm³/min.

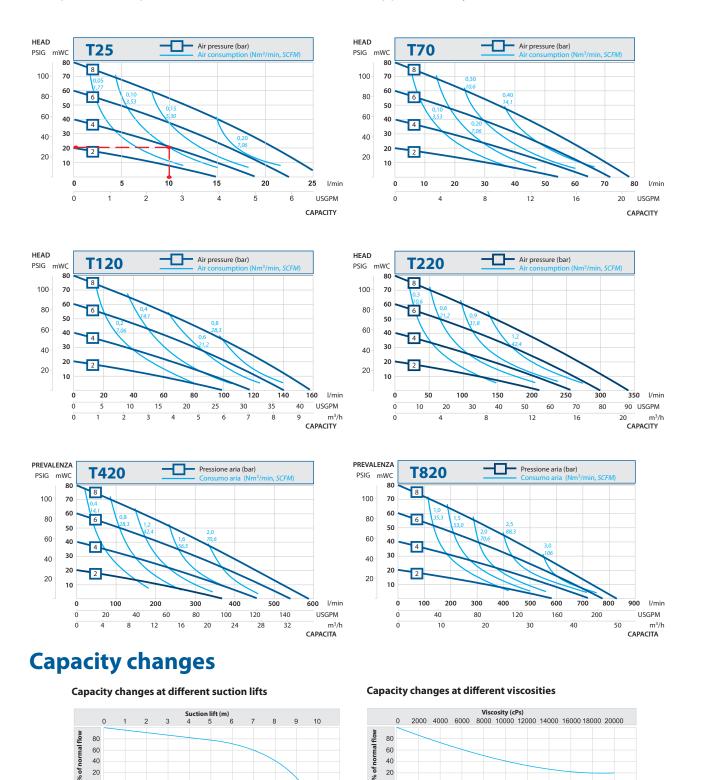


Changes reserved without notice


20

Dimensions

Aluminium and cast iron pumps T

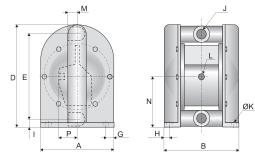

Stainless steel pumps T

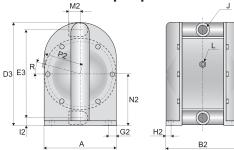


øк


<u>J2</u>


øк

Drum pumps TD

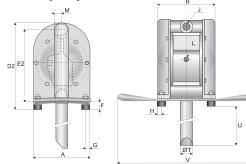

Twin pumps TT

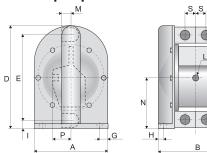

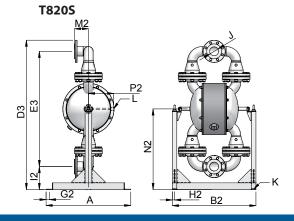

Dimensions for metal series

Dimensions in mm (where other is not indicated) Dimensions in inch (where other is not indicated)

Dim	Pump size										
Dim	25	70	120	220	420	820A**	820S**				
٨	105	150	200	275	356	470	760				
A	4.13	5.91	7.87	10.83	14.02	18.50	29.92				
	117	167	198	267	342	488	-				
В	4.61	6.57	7.80	10.51	13.46	19.21	-				
	-	157	200	282	347	488	750				
B2	-	6.18	7.87	11.10	13.66	19.21	29.53				
	162	233	302	419	539	840	-				
D	6.38	9.17	11.89	16.50	21.22	33.07	-				
	173	249	322	-	-	-	-				
D2	6.81	9.80	12.68	_	_	_	_				
	-	229	310	422	529	840	1341				
D3	_	9.02	12.20	16.61	20.83	33.07	52.80				
	132	190	252	346	448	688	-				
Е											
	5.20	7.48	9.92	13.62	17.64	27.09	-				
E2	147	216	279	-	-	-	-				
	5.79	8.50	10.98	-	-	-	-				
E3	-	192	257	348	443	-	1035				
	-	7.56	10.12	13.70	17.44	-	40.75				
F	13	20	20	-	-	-	-				
	0.51	0.79	0.79	-	-	-	-				
G	11	18	20	26	38	50	-				
5	0.43	0.671	0.79	1.02	1.50	1.97	-				
G2	-	17	20	31	36	-	25				
U2	-	0.67	0.79	1.22	1.42	-	0.98				
н	12	19	20	29	30	53	-				
	0.47	0.75	0.79	1.14	1.18	2.09	-				
112	-	13.5	23.5	34	32	-	13				
H2	-	0.53	0.93	1.34	1.26	-	0.51				
	16	22	27	34	47	82	-				
Ι	0.63	0.87	1.06	1.34	1.85	3.23	-				
	-	19	27	38	44	-	206				
12	-	0.75	1.06	1.50	1.73	-	8.11				
	1/2″	3/4″	1″	1 1/2″	2″	DN8	0(3″)				
J	1/2	3/4	1	1 1/2	2		0(3")				
	3/8″	1/2″	3/4″	1″	2″	-	_				
J2	3/8"	1/2″	3/4"	1″	2″	_	_				
	6.5	10	10	10	10	12.5	25x13				
ØK	0.26	0.39	0.39	0.39	0.39	0.49	1x0.5				
	1/8″	1/4"	1/4"	1/2"	1/2"	3/4"	3/4"				
L		1/4				3/4	3/4				
	1/8		1/4	1/2	1/2						
М	19	29	33	45	57	84.5	-				
	0.75	1.14	1.30	1.77	2.24	3.33	-				
M2	-	40	52	70	90	-	126				
	-	1.57	2.05	2.76	3.54	-	4.96				
Ν	82	117	153	207	274	356	-				
	3.23	4.61	6.02	8.15	10.79	14.02	-				
N2	-	115	155	212	266	-	724				
	-	4.53	6.10	8.35	10.47	-	28.50				
Р	30	47	39	59	59	72.5	-				
•	1.18	1.85	1.54	2.32	2.32	2.85	-				
P2	-	82	105	143	183	-	238				
14	-	3.23	4.13	5.63	7.20	-	9.37				
R	-	15°	15°	0°	0°	-	0°				
n	-	15°	15°	0°	0°	-	0°				
c	12.5	21	26	35	420	-	-				
S	0.49	0.83	1.02	1.38	1.57	-	-				
	20	30	30	-	-	-	-				
ØT	0.79	1.18	1.18	-	-	-	_				
	1170*	1170*	1170*	-	-	-	-				
U	46.06*	46.06*	46.06*	_	_	_	_				
	286	374	400	_	_	_	_				
	200	2/4	400	-	-	-	-				

* = Any length up to 2000 mm on request * = Any length up to 79" on request ** = Available in aluminium only

*** = Available in Stainless Steel only

Technical data

Dete	Pump size											
Data	25	70A	70S	120A	1205	220A	2205	420A	4205	820 A	820 S	
General characteristics												
*Max capacity (l/min) / (US gpm)	26 / <mark>6.8</mark>	78	/ 20	158	3 / <mark>41</mark>	330) / 87	570	/ 150	820	/ 216	
**Volume per stroke (ml) / (cu in)	45 / <mark>2.8</mark>	105 / <mark>6.4</mark>	101 / <mark>6.2</mark>	272/16.6	304 / 1 <mark>8.6</mark>	884 / <mark>53.9</mark>	962 / <mark>58.7</mark>	2440 / 148.9	2480 / 151.3	4897 / <mark>298.8</mark>	3452 / <mark>210</mark> .	
Max discharge pressure (bar) / (psi)						8	/ 116					
Max air pressure (bar) / (psi)						8	/ 116					
*** Max suction lift dry (m) / (Ft)	1.5 / <mark>5</mark>	3 /	9.8	4,	/ 13	4.	/ 13	4,	/ 13	5 /	′ 1 6	
Max suction lift wet (m) / (Ft)	8 / <mark>26</mark>	8 /	/ 26	8,	/ 26	8,	/ 26	8,	/ 26	8 /	26	
Max size of solids (ø in mm) / (in)	3 / 0.12	4 /	0.16	6/	0.24	10/	0.39	15 /	0.59	13 /	0.51	
Max temp with EPDM/NBR (°C) / (°F)						80) / 176					
Max temp with PTFE (°C) / (°F)						11	0 / 230					
Weight												
Standard pump in alu (kg) / (lb)	2/4.4	5 /	/ 11	8.65	/ 19.1	18.1	/ 39.9	36.8	/ 81.1	101.5	/ 223.8	
Standard pump cast iron (kg) / (lb)	4.1/9	9.97	/ 21.8	17.6	/ 38.8	33.4	/ 73.6	71.4	/ 157.4	-		
Standard pump in AISI 316 (kg) / (lb)	- (6.8	/ 15	15.5	/ 34.2	35.9	/ 79.2	66.1	/ 145.7	137 / 302		
Drum pump TD in alu (kg) / (lb)	3 / 6.6	7/	/ 15	10	/ 22		-		-		-	
Drum pump TD in AISI 316 (kg) / (lb)	-	7.5/	16.53	16/	35.27		-		-		-	
Material of components												
Pump housing and all wetted	aluminium											
metal details	and cast	and cast aluminium, cast iron or stainless steel AISI 316L							aluminium or AISI 316L			
	iron											
Centre block, alu and cast iron pumps	5						andard) or c					
Centre block, AISI 316L pumps	-					, ,		e PE or alum	inium			
Diaphragms	NBR, FKM, PTFE, PTFE 1705B or EPDM											
Valve balls				NBR, PTFE, AISI 316L****, EPDM, polyurethane or ceramic****								
Air valve	Brass / NBR (standard) or AISI 316L / FKM or PET / NBR (standard on TX820), PET/FKM											
Gaskets	Klingerseal/NBR (standard), Klingerseal/EPDM, Klingerseal/FKM, FEP/FKM (stainless steel pumps))							
Housing screws			Ste	el on alum	ninium and	l cast iron p	oumps, A4-	80 on stainle	ss steel pum	os		
Diaphragm shaft				Stainless steel AISI 316L (TX25, T820) / 304L (T70 –T420)								
Drum handle (TD pumps)		Stainle	ess steel	AISI 316					-			


* = Recommended flow is half of the max flow, i.e. recommended flow for a T120 is 79 l/min (20.8 US gpm).

** = The value is based on pumps with PTFE diaphragms (other materials - please contact Tapflo). It should be remembered that the volume per stroke may vary depending on the pump's operating parameters.

*** = This is max value with stainless steel valve balls, other valve ball materials may reduce the suction. Please consult us. **** = Not available on TX820.

Pump code

The pump code details the specification, maximum capacity and materials of the major components.

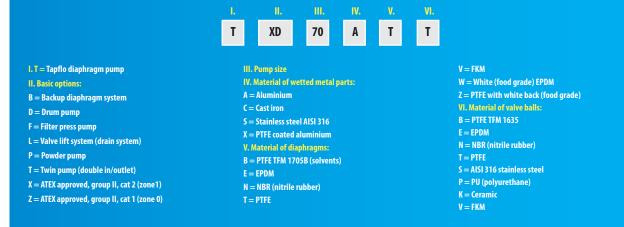

* = Ask us for complete pump code with all available options and executions. Changes reserved without notice

Sanitary series pumps

Hygienic design - made from electropolished stainless steel AISI 316L to meet the requirements in hygienic installations.



The Tapflo sanitary series is particularly designed to meet the requirements of the food, beverage, pharmaceutical and cosmetic industries.

Lubrication free air distribution system, maintenance free ball check valve system and total visual inspection of the wetted parts are some of the major features for this pump series.

The materials used on certain models comply with the FDA guidelines.


Models with extra fine internal surface finish Ra < 0.8 and Ra < 0.5 are available upon request.





The sanitary pump range

≫ T30 - 28 l/min, 1″
≫ T80 - 78 l/min, 1″
>> T125 - 155 l/min, 1 1/2"
≫ T225 - 330 l/min, 2″
>> T425 - 570 l/min, 2 1/2"
>> T825 - 820 l/min, 3″

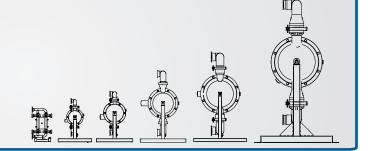

Typical applications

Sector		Example of applications
»	Dairy products	Milk, cream, yogurt, cream cheese, melted cheese
»	Grocery	Ketchup, mayonnaise, tomato products, mustard
»	Beverages	Flavors, coloring, fruit juice
»	Bakery	Dough, ingredients
»	Brewery	Beer, flavors, coloring, wort
»	Hygiene	Soap, shampoo
»	Cosmetics	Cream, alcohols, perfume

The sanitary design

Made to be clean

Quick dismantling

The clamp system ensures quick and easy dismantling without any tools

Pollution free air valve

The sealing system is lubrication free, always keeping your product and environment free from oil contamination.

Variety of connection types

The pump is supplied as standard with SMS3017/ ISO2037 clamp connections. However, the pump may be equipped with almost any type of connection used in the hygienic field – DIN 11851 thread, SMS 1145 thread, DIN 11864 aseptic connections to mention a few.

Plain surface

The sandwich diaphragm has a completely plain surface, which eliminates bacteria growth problems. The diaphragm is available in food grade materials -PTFE, white EPDM or NBR FDA.

Superior finish

Both liquid side and outside is electropolished, to obtain superior finish and hygiene. Special surface finish may be done according to your requirements.

Easy draining

Drain the pump by turning the pump in its support (T80-T825)

Our design allows for total visual inspection of the wetted parts. There are no hidden areas where bacteria can grow. The manifold clamps and the housing screws are simply removed for complete disassembly and cleaning. The pump is also designed for cleaning and sterilization in place – C.I.P. and S.I.P. After such operations, the pump is easily turned in its support for drainage.



Special versions



Heating jacket

The heating jacket is used when the pumped product has to maintain a specific temperature, high or low, throughout the process. A heating or cooling medium is continuously circulated in the heating jacket. The jacket is covering all the wetted parts of the pump.

>> Available for sizes: T80, T125, T225, T425







Flap valves for big solids

Flap valves are available for the sanitary pumps, ideal in applications with bigger size and delicate solids.

The gentle pumping principle will maintain solids without any destruction.

Models available with flap valves:

- >> T80 (max 17 mm solids)
- T125 (max 18 mm solids)
- >> T225 (max 42 mm solids)
- >> T425 (max 44 mm solids)

Magnetic ball lifters

>> Available for sizes: T80, T125, T225

Magnetic ball lifters are implemented in Sanitary AODD pumps, to enable pump emptying without removing it from the installation when no other draining option is available. Rotating the pump is no longer needed.

Counter-connections

In order to ease the pump connection with installation Tapflo has added a full range of counter-connections to sanitary pumps. They fit pumps with standard tri-clamp connection as well as optional DIN11851 and SMS 1145 connections.


Performance curves

The performance curves are based on water at 20°C. Other circumstances might change the performance. See below how the capacity will change at different viscosities and suction lifts. These curves are valid for all sanitary pumps.

Example see the red line • _ _ _ _

A flow of 25 litre/minute is desired.

The discharge head is calculated to 25 mWC. We choose a T80. It requires an air pressure of 4 bar and will consume approximately 0.20 Nm³/minute.

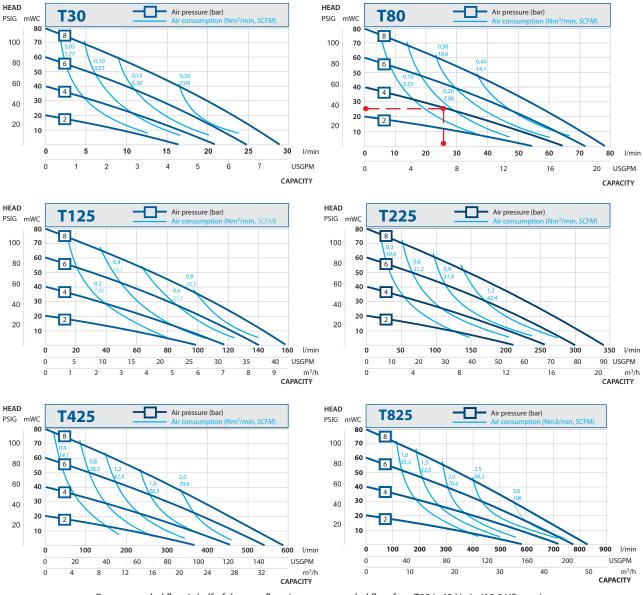


Recommended flow is half of the max flow, i.e. recommended flow for a T80 is 40 l/min (10.6 US gpm).

Capacity changes

Capacity changes at different suction lifts

Capacity changes at different viscosities





Changes reserved without notice

Dimensions

Dimensions for sanitary series Dimensions in mm (where other is not indicated) Dimensions in inch (where other is not indicated)

T30



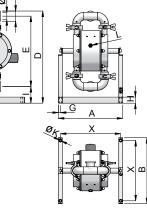

* = Dimensions for standard clamp connections only

1 = Clamp connections/pipes according to SMS3017/ ISO2037 (T425, T825)

2 = Threaded connections according to DIN 11851

3 = Threaded connections according to SMS 1145

Technical data

Dim				Pump siz	ze		
זע		30	80	125	225	425	825
А		169	295	320	404	468	750
	A	6.7	11.6	12.6	15.9	18.4	29.5
В		153	303	328	412	476	760
		6.0	11.9	12.9	16.2	18.7	29.9
D		313	393	458	647	808	1288
		12.3	15.5	18.0	25.5	31.8	50.7
E		240	294	350	528	664	1034.5
		9.4	11.6 13.8 20		20.8	26.1	40.7
G		34	10	10	10	10	20
		1.3	0.4	0.4	0.4	0.4	0.8
Н		30	30	30	30	30	60
		1.2	1.2	1.2	1.2 1.2		2.4
I		48	74.5	82.5	86.5	98.5	206.5
		1.9	2.9	3.2	3.4	3.9	8.1
	TC ¹	DN25	DN25	DN38	DN51	DN70	DN76.1
J	DIN ²	DN20	DN25	DN40	DN50	DN65	DN80
J	SMS ³	25	25	38	51	63.5	76.1
	RJT	3/4″	1″	1 1/2"	2″	3″	3 1/2"
	av	9	9	9	9	9	25x13
1	ØK	0.4	0.4	0.4	0.4	0.4	1x0.5
	L	1/8″	1/4″	1/4″	1/2″	1/2″	1/2″
0	***	50.5	50.5	50.5	64	91	98
ØM*		2.0	2.0	2.0	2.5	3.6	3.9
ØN*		22.6	22.6	35.6	48.6	66.8	72.9
k	N N	0.9	0.9	1.4	1.9	2.6	2.9
	Х	125	275	300	384	448	710
	^	4.92	10.83	11.81	15.12	17.64	27.95

General dimensions only, ask us for detailed drawings. Flap valve pumps are not shown here, ask us for drawings.

	Pump size												
Technical data	30	80	125	225	425	825							
Max capacity (l/min) / (US gpm)	28/ 7.4	78/ 20.6	155 / <mark>40.9</mark>	330 / 87.2	570/ 150.6	820 / 216.6							
*Volume per stroke (ml) / (cu in)	40 / 2.4	135 / <mark>8.2</mark>	314 / 19.2	1000 / <mark>61</mark>	2300 / 140.3	3281 / 200.2							
Max discharge pressure (bar) / (psi)	8 / 116	8/116	8 / 116	8 / 116	8/116	8 / 116							
Max air pressure (bar) / (psi)	8 / 116	8/116	8 / 116	8 / 116	8/116	8/116							
**Max suction lift dry (m) / (Ft)	2 / 6.6	3 / 9.8	4 / 13	5 / 16	5 / 16	4/13							
Max suction lift wet (m) / (Ft)	8 / 26	8 / <mark>26</mark>	9 / 29.5	9 / 29.5	9 / 29.5	9 / 29.5							
Mary size of a dida (a in more) ((in)	2/012	4 / <mark>0.16</mark>	6 / <mark>0.24</mark>	10 / <mark>0.39</mark>	15 / <mark>0.59</mark>	20 / 0.59							
Max size of solids (ø in mm) / (in)	3/0.12	17 / 0.67***	17 / <mark>0.67***</mark>	42 / 1.65***	42 / 1.65***	95 / <mark>3.74***</mark>							
Max temperature (°C) / (°F)	110/230	110/230	110 / 230	110/230	110/230	110/230							
Weight (kg) / (lb)	4 / 9	8 / <mark>18</mark>	11 / <mark>24</mark>	21 / 46	35 / 77	133 / <mark>293</mark>							
Wetted metal details		c	taiplass stool AISL2	16L alactra polich	ad								
	Stainless steel AISI 316L electro polished												
Centre block (not wetted)			PP, PE co	nductive									
Diaphragms		PTFE, PTFE with whi	to back EPDM wh	to EPDM white NE	2D	PTFE							
Diapiliagilis			LE DACK, LE DIVI, WIT	ILE LF DIVI, WHILE NE	חכ	EPDM							
V I I II			DTEE ALCI DA 4 DI	C 1 054000									

Valve balls PTFE, AISI 316, PU, Ceramic, PE1000 Brass (std.), stainless steel AISI 316L or PET with NBR (std.), EPDM or FKM O-rings Air valve Gaskets PTFE or EPDM Housing pin screws Stainless steel Stainless steel AISI 316L (T30, T825) / 304L (T80 -T425)

Diaphragm shaft

* = The value is based on pumps with PTFE diaphragms (other materials - please contact Tapflo). It should be remembered that the volume per stroke may vary depending on the pump's operating parameters.

** = This is max value with stainless steel valve balls, other valve ball materials may reduce the suction. Please consult us.

E = EPDM

*** = Flap valve version. Theoretical max solid size, the actual size may vary depending on the shape. For more information contact us.

Pump code

The pump code details the specification, maximum capacity and materials of the major components.

- I. T = Tapflo diaphragm pump II. Basic options: B = Backup diaphragm system $\mathbf{J}=\mathbf{Pump}$ with heating jacket X = ATEX approved, group II, cat 2 (zone 1) Z = ATEX approved, group II, cat 1 (zone 0) III. Pump size: IV. Material of wetted metal parts S = stainless steel AISI 316L
- Т J 80 V. Material of diaphragms: B = PTFE 1705B (solvents) E = EPDM W = White food grade EPDM N = NBR (nitrile rubber) T = PTFF Z = PTFE with white back (food grade)
- N = NBR (nitrile rubber) T = PTFE P = PU (polyurethane) K = Ceramic B = PTFE TFM 1635 blank = flap valve version

Т

T

* = Ask us for complete pump code with all available options and executions. Changes reserved without notice

IV.

S

Aseptic series pumps Keeping your process clean



Tapflo Aseptic series pumps are designed for service in pharmaceutic-, biotech- and food industries where a clean process is the key.

Tapflo Aseptic series is EHEDG certified, has FDA and USP VI approved materials and conforms to the ATEX directive 2014/34/EU.

Typical applications

Industry	Example of applications
>> Food & dairy	Soup, cream, syrup, dairy products, flavoring, alcohol, chocolate, paste
>> Pharmaceutics & cosmetics	Cream, paste, alcohol and filtration gel









Features & Benefits

No bacteria growth no horizontal areas inside the pump



Easy cleaning and draining designed for CIP and SIP cleaning



Gentle pumping no damage of sensitive products



Wide range of connection types TriClamp, sanitary threads (DIN, SMS) etc.



Hygienic surfaces

housings made from electro polished stainless steel AISI 316L, Ra < 0.8 (standard) or Ra < 0.5 (on request)



No leakage no rotating shaft seals



Flexible installation self-priming



Reliable in service can run dry and against closed valve without damage



Environmental friendly lube free air valve




Hygienic diaphragms designed without any nuts or plates on the pumped side

The EHEDG certificate



The EHEDG (European Hygienic Engineering & Design Group) certificate is your guarantee that the design is according to the hygienic guidelines. Furthermore the pump is cleanability tested, which means bacteria does not grow in the pump after cleaning and draining procedure.


Performance curves

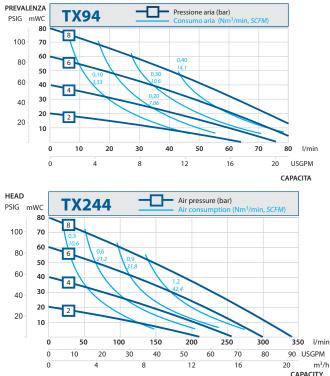




Keeping your process clean


Smooth surfaces and cleanability are important keys for the EHEDG certification

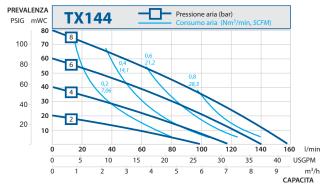

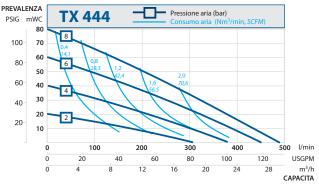

Technical data


TX94	TX144	TX244						
		17244	TX444					
94 / 25	144 / <mark>38</mark>	270 / 71	360 / <mark>95</mark>					
95 / 5.80	256 / 15.62	796 / 48.57	1922 / 11 <mark>7,29</mark>					
8 / <mark>16</mark>	8 / 16	8 / 16	8 / <mark>16</mark>					
8 / 1 6	8 / 16	8 / 16	8 / 1 <mark>6</mark>					
2 / 6.6	3 / 9.8	4.4 / 14.4	5/ 16					
6/0.24	6/0.24	10 / 0.39	15 / <mark>0.6</mark>					
-20° +110°C (temporarily higher)								
15 / <mark>33</mark>	22 / 48.5	50 / 110	107 / <mark>236</mark>					
DIN 32676 (standa	ard), DIN 11864, DI	N 11851						
TX pumps: TZ pumps: Ex II 2G Ex h IIC T6T4 Gb Ex II 1G Ex h IIC T6T4 Ga Ex II 2D Ex h IIIC T60°CT125°C Db								
AISI 316L, Ra < 0.8, Ra < 0.5 on request								
PTFE (FDA & USP \	/I), PTFE 1705B (so	lvents, FDA & USP VI)						
PTFE (FDA), PTFE (USP VI & FDA), AISI 316L								
EPDM (FDA), EPDI	M (USP VI & FDA), F	EP/FKM (FDA), FKM						
	95 / 5.80 8 / 16 8 / 16 2 / 6.6 6 / 0.24 15 / 33 DIN 32676 (standa TX pumps: Ex II 2G Ex h IIC T6 Ex II 2D Ex h IIC T6 Ex II 2D Ex h IIC T6 Ex II 2D Ex h IIC T6 PTFE (FDA & USP N PTFE (FDA), PTFE	95 / 5.80 256 / 15.62 8 / 16 8 / 16 8 / 16 2 / 6.6 3 / 9.8 6 / 0.24 -20° + 110°C (t 15 / 33 22 / 48.5 DIN 32676 (standard), DIN 11864, DI TX pumps: Ex II 2G Ex h IIC T6T4 Gb Ex II 2D Ex h IIC T60°CT125°C Db AISI 316L, Ra < 0.8, Ra < 0.5 on require PTFE (FDA & USP VI), PTFE 1705B (so PTFE (FDA), PTFE (USP VI & FDA), AIS	95 / 5.80 256 / 15.62 796 / 48.57 8 / 16 8 / 16 8 / 16 8 / 16 8 / 16 8 / 16 2 / 6.6 3 / 9.8 4.4 / 14.4 6 / 0.24 6 / 0.24 10 / 0.39 -20* +110°C (temporarily higher) 15 / 33 22 / 48.5 50 / 110 DIN 32676 (standard), DIN 11864, DIN 11851 TZ pumps: Ex II 2G Ex h IIC T6T4 Gb Ex II 1G Ex h IIC T6 Ex II 2D Ex h IIIC T60°CT125°C Db Ex II 1G Ex h IIC T6 EX II 2D Ex h USP VI), PTFE 17058 (solvents, FDA & USP VI)					

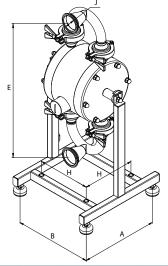

Dim	Pump size										
Dim	TX94	TX144	TX244	TX444							
А	278	278	360	433							
В	278	278	360	433							
Е	457	488	700	885							
н	188	188	270	331							
J	DN 40	DN 50	DN 65	DN80							

Options *= The value is based on pumps with PTFE diaphragms (other materials - please contact Tapflo). It should be remembered that the volume per stroke may vary depending on the pump's operating parameters.

**= This is max value with stainless steel valve balls, other valve ball materials may reduce the suction. Please consult us. Dimensions in mm (where other is not indicated)



Intelligent pumps - TC series



TC Intelligent pumps are fitted with ingenious LEAP® technology developed by Tapflo.

LEAP[®] or 'Low Energy Air Pump' is a patented technology used in AODD pumps to reduce the minimum operating air pressure by reducing internal losses and friction found in conventional AODD pumps.

LEAP uses a unique indirect system to detect the position of the diaphragm shaft controlling the diaphragm movement automatically.

Features & Benefits

Available in Plastic, Metal and Sanitary series AODD pumps

TC50 - TC425 (T50 - T425 equivalent)



Retrofit

Leap can be fitted to any existing Tapflo Air Operated Diaphragm Pumps

Batch Dispensing

allowing the pump to automatically stop after the required volume has been dispensed.

Improved Lifespan

the TC series uses an air valve that has a significantly longer life expectancy over rubber seal technology.



Dry Running

by analysing the frequency of pulses, the pump can analyse when it is running dry.

\checkmark

Noise Reduction

ability to utilise lower air pressure reduces the noise of the pump



Electrical feedback

signal allows for external monitoring of the pump process.



Improved Maintenance

main air valve can be changed in under two minutes without the removal of the pump from the process line.



Control Simplification


no need for an external pneumatic solenoid valve, reducing costs and simplifying control.



Dead Heading

as with dry running, the frequency of pulses can be monitored, alerting if the pump has a blockage.

Graph showing fluid flow against air pressure required

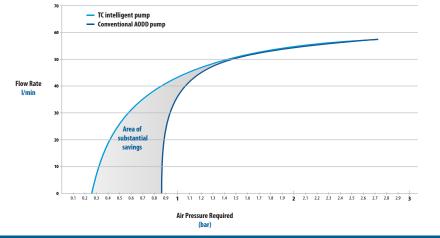

The pump fitted with LEAP® Technology is able to **start pumping at 0.3 bar without stalling**, in test the pump was already achieving flow rates of **70% of its maximum open end flow before other pumps had even started.**

Filter press pumps - TF series

The Tapflo pump station for filter press feeding is a very compact unit that can be mounted directly

to the filter press.

TF series

The design and function allows the user a straightforward pressing of slurries. Pressure regulator is already mounted to the unit.

An external pressure booster doubles the delivery pressure. For example, with available air pressure of 7 bar, the delivery pressure will be maximum 14 bar.

TF pumps are based on standard Tapflo AODD pump design PE & FTFE: TF 50 | TF 100 | TF 200 | TF 400 Metal pumps: TF 70 | TF 120 | TF 220 | TF 420



√ F

Few parts – easy to maintain




Long service life

Re

Reliable and compact

The Installation

Adding a pump to an existing filter press was never such easy. The pump is already equipped with a pressure booster, manometers, regulation knob and all essential hoses and fittings.

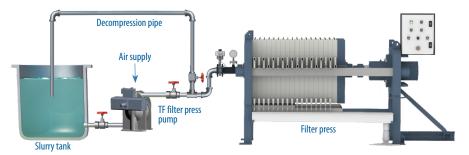

Technical data

Pump size	Connection size (″ BSP or NPT)	*Max capacity (I/min) / (US GPM)	Max pump pressure (bar) / (PSI)
TF 50 TF 70	1/2" 3/4"	*60 / 15.8 78 / 20	16/ 232
TF 100 TF 120	1″	*125 / 33 158 / 41	16 / 232
TF 220 TF 420	1 1/2" 2"	*330 / 87 570 / 150	14 / 203
TF 200 TF 400	1 1/2" 2"	*330 / 87 570 / 150	12/ 174

* = This max flow is obtained when using a bypass round the pressure booster at low pressure

Powder pumps - TP series



Reduced contamination

The powder is transferred in a hermetic system from the powder container to your process.

Economical and compact solution

The Tapflo powder transfer pump can do the same job as many complex and large powder systems. The compact design also makes the unit portable.

What kind of powders?

The powder transfer pump will handle different types of process powders, with specific weight from 80 up to 720 kg/m³ dry weight. Generally, if the powder does not clump together when squeezed in hand, the Tapflo powder transfer pump can be used successfully. A few examples of common powders are sintering powder, carbon black, resins and silicones.

Capacity

The capacity of the powder transfer is extremely different from one powder to another, depending on the consistency and weight etc.




EN 10204







Working principle

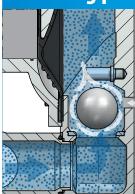

No start up problems

The air induction system eliminates powder pack up problems when starting the pump.

Air is induced to the powder side of the pump for diffusion of the powder. The induction flow can manually be adjusted by means of a needle valve to obtain a optimum performance.

Features & Benefits



Economical

compared with other complex powder systems



Convenient

and safer than manual powder handling

Technical data

Model	TXP70	TXP120	TXP220	TXP420	TXP820				
In/outlet connections	3/4″ BSP thread (NPT on request)	1" BSP threads (NPT upon request)	1 1/2" BSP threads (NPT upon request)	2" BSP threads (NPT upon request)	3" BSP threads (NPT on request)				
Features	Complete air induction system included								
Explosion protection	ATEX marked according to group IIG (gas) / IID (dust), category 2								
Housing material	PTFE coated aluminium								
Diaphragm material	hragm material EPDM, NBR, PTFE								
Valve ball	all EPDM, NBR, AISI 316L, PU								
In/outlet material	ed aluminium								

Pharmaceutical pumps - 5UVI series

USP VI approved pharmaceutical series air driven pump for pharmaceutical and biotech industries



This pump series was developed in co-operation with one of the world leading supplier to the biotech market. It serves the biotech- and pharmaceutical industries in numerous applications.

Our unique USP approved (United States Pharmacopoeia) hygienic PTFE or PP pump, features all wetted parts in USP class VI certified materials.

Simplicity Pump housing with only three parts makes it extremely easy to maintain.

Superior finish

High finish and hygienic approved materials.



The Pharmaceutical series pumps

»	T53
»	T103
»	T203
>>	T403

60 l/min; ¾" 125 l/min; 1" 330 l/min; 1 ½" 570 l/min; 2"

Features & Benefits



Inert materials no contamination of the pumped product



USP class VI approved materials



Extremely easy to maintain pump housing with very few components


Active pulsation dampeners


The Tapflo pulsation dampener works actively with compressed air and a diaphragm, automatically setting the correct pressure to minimise the pulsations.

The active pulsation dampener is the most efficient way to remove pressure variations on the discharge of the pump. The Tapflo pulsation dampener works actively with compressed air and a diaphragm, automatically setting the correct pressure to minimise the pulsations. **Explosion proof models are available** Certified according to directive 2014/34/EU (ATEX), group II, cat 2, for use in EX-zone 1. Contact us for information. REACH EN 10204 Working principle air release position filling position When the pressure in the piping system decreases, due to the pulsating nature of the pump operation, the pulsation dampener eliminates pressure peak to the discharge between the pump strokes, therefore supplying a steady flow of pumped medium. This pumping action created by the dampener, decreases the pressure variations and pulsations. **Features** Minimized vibrations and water hammer effects Protection of all kinds of instruments in your pipe system Optimized pump performance ressure and reduced maintenance costs Minimum air consumption Time without dampener with dampener The dampening effect Reduced pressure peaks The pressure variation in a discharge line with and without a pulsation dampener. **Options & accessories** DTK – dampener designed to be built on pump Pulsation dampener with stand Pulsation dampener with pump Pulsation dampener with guardian

Dimensions

PE, PTFE & aluminium dampeners

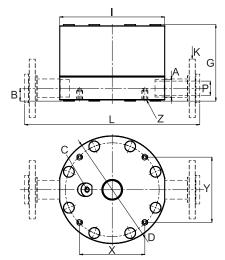

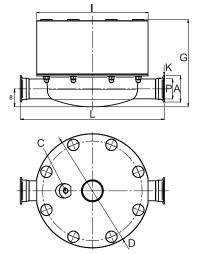


Dimensions in mm (where other is not indicated) Dimensions in inch (where other is not indicated)

Dimension	Dampener size																		
Dimension	9/20	25	30	50	70	80	100	120	125	200	220	225	400	420	425	800	820 A	820 S	825
BSP	G 3/8"	G 1/2'	G 3/8"	G 1/2"	G	3/4"		G 1"			G 1 1/2"			G 2"		-	G 3"	-	-
DIN Flange A ANSI Flange	95	-	95	95	105	-	115	115	-	150	150	-	165	165	-	202	-	202	-
SMS3017/ISO2037	-	-	50,5	-	-	50,5	-	-	50,5	-	-	64	-	-	91	-	-	-	-
DIN 118513	-	-	Rd 44x1/6"	-	-	Rd 52 x 1/6'	- '	-	Rd 65 x 1/6"	-	-	Rd 78 x 1/6"	-	-	Rd 95 x 1/6	- "	-	-	Rd 110 x 1/4
В	15/33 ¹	15	10,6	17/32,41	16,5	16,5	25,5/45 ¹	25	16,5	33/50 ¹	41	41	41/61	41	46	92	92	19,3	19,3
	0,59/1,31	0,59		0,67/1,27 ¹		0,65	1/ 1,77 ¹	0,98	0,65	1,29/1,97 ¹	1,61	1,61	1,61/2,40 ¹	1,61	1,81	3,62	3,62		0,76
C		G 1/4'			G 1/4"			G 1/4"			G 1/4"			G 1/4"		_		G 1/4"	
D		110			158			208			277			360				470	
		4,33			6,22			8,19			10,91			14,17				18,50	
G	85 / 103 ¹	85	79	109/132 ¹		116,5	148/161,51			200/217,51		209		256/243,52	255	394	392	330	330
5	3,35/4,061		3,11	4,29/5,20 ¹	4,61/4,29 ²	4,59	5,83/6,36 ¹	5,31/5,69 ²	5,31	7,87/8,56 ¹		8,23	9,61/10,28 ¹		10,04	15,51		12,99	12,99
1		107			155			203			270			352		470	450		
•		4,21			6,10			7,99			10,63			13,86		18,50			18,50
BSP	G 3/8"	G 1/2'	-	G 1/2"	G 3/4"	-	G 1"	G 1"	-	G 1 1/2"	G 1 1/2"	-	G 2"	G 2"	-	-	G 3"	-	-
DIN Flange ^₄	DN15	-	DN 15	DN15	DN 20	-	DN25	DN 25	-	DN40	DN 40	-	DN50	DN 50	-	DN80	-	DN80	-
K ANSI Flange ^₄	1/2"	-	1/2"	1/2"	1/2"	-	1"	1"	-	1 1/2"	1 1/2"	-	2"	2"	-	3"	-	3"	-
SMS3017/ISO20375	-	-	DN 25	-	-	DN 25	-	-	DN 38	-	-	DN 50	-	-	DN 70	-	-	-	-
DIN 1185135	-	-	DN25	-	-	DN 25	-	-	DN 40	-	-	DN 50	-	-	DN 65	-	-	-	DN 80
DIN & ANSI	235		-	28	35	-	37	'5	-	45	50	-	55	50	-	700	-	700	-
Flange	9,25	5	-		22	-	14,76 -		17,72 -		21,65		-	27,56		27,56			
L BSP	107	107 -		15	155 -		203 -		-	270		-	352		-	-	450	-	
L D3P	4,21		-	6,	10	-	7,9	99	-	10,63		-	13,86		-	-	17,72	-	
Other	-		180	-		210			300	-		350	-		450	-	-	-	600
Connections ³	-		7,09	-		8,27			11,81	-	- 13,78		-		17,72	-	-	-	23,62
DIN Flange ^₄	14	-	17,3	14	22,9	-	26	29,7	-	45,4	44,3	-	51,4	56,3	-	80	-	80	-
Din Flange*	0,55	-	0,68	0,55	0,90	-	1,02	1,17	-	1,79	1,74	-	2,02	2,22	-	3,15	-	3,15	-
	14	-	17,3	14	22,7	-	26	30,1	-	45,4	42,8	-	51,4	54,8	-	80	-	80	-
ANSI Flange ⁴	0,55	-	0,68	0,55	0,89	-	1,02	1,19	-	1,79	1,69	-	2,02	2,16	-	3,15	-	3,15	-
SMS3017/	-	-	22,6	-	-	22,6	-	-	35,6	-	-	49	-	-	66,8	-	-	-	-
ISO20375	-	-	0,89	-	-	0,89	-	-	1,40	-	-	1,93	-	-	2,63	-	-	-	-
DINIAADEADE	-	-	20	-	-	26	-	-	38	-	-	50	-	-	66	-	-	-	81
DIN 1185135	-	-	0,79	-	-	1,02	-	-	1,50	-	-	1,97	-	-	2,60	-	-	-	3,19
	36		-	90	,3	-	11	3,8	-	167	7,6	-	220	6,3	-		297		-
х	1,42		-	3,5		-	4,4		-	6,60 -		-	8,9		-		11,69		-
	86,8	3	-	10	0,3	-	13	5,6	-	167	7,6	-	220	6,3	-		297		-
Y	3,42	2	-	3,9	95	-	5,3	34	-	6,6	50	-	8,9	91	-		11,69		-
Z	M4x2		-	M4:		-	M8x22 M8x30 PE	M8x25	-	M8x22 PTFE M8x22 PE	M8x25	-	M8x22 PTFE M8x30 PE	M8x25	-	M8x22 PTFE		x25	-

3 = SMS3017/ISO2037, DIN 11851, SMS1145, BS 4825 (RJT) 4 = Only plastic and metal pumps 1 = PE / PTFE 2 = SS / ALU


5 = Only sanitary pumps * = Dimensions for other connections in IOM Manual

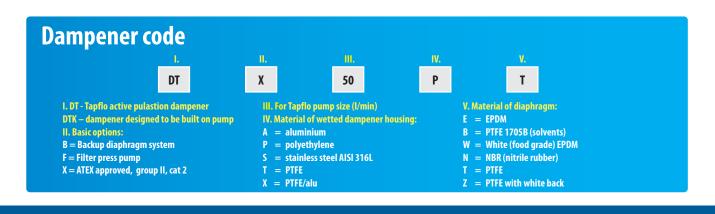

Stainless steel and sanitary dampener

Systems & accessories

Guardian systems

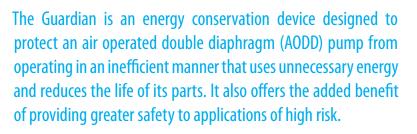

The Guardian directly monitors the discharge fluid pressure against its set point stopping the pump if the media pressure increases above the set point (closed valve) or falls below the set point (dry-run) dependant on configuration.

Applications of Guardian systems

Barrier Protection

Barrier pumps (TB) have an additional set of diaphragms used to back-up the primary diaphragms. In case of a breach the liquid remains inside the pump, instead of leaking out through the air exhaust. The Guardian monitors the pressure between the primary and secondary diaphragms, stopping the pump if the pressure increases above the set point.

Dry run & stop

The Guardian monitors the fluid discharge pressure of the pump, stopping it if the pressure falls below the set point, caused by a lack of media on the suction causing air to be ingested into the pump.

Dead head & stop

The Guardian monitors the fluid discharge pressure of the pump, stopping it if the pressure rises to the set point, caused by a closed valve or over pressure in the discharge line.

Dead head & restart

The Guardian monitors the fluid discharge pressure of the pump, stopping it if the pressure rises to the set point, caused by a closed valve or over pressure in the discharge line. When the pressure falls below the set pressure, the pump automatically restarts.



Control systems



Pneumatic batch control

Pneumatic batcher can control any Tapflo AODD pump to deliver accurate and repeatable volumes. Fully programmable allowing you to set the batch amount (TPUK-BP) or batching time (TPUK-BT).

Pneumatic level control

A fully pneumatic automatic level system used to maintain set liquid levels within a sump or thank.

Stroke counter / low pressure VFC

A stroke to volt free contact (VFC) is available for integration with PLC systems. Simply connect to any AODD pump via the air exhaust muffler to monitor the pump strokes.

Life counter

Tapflo's life counter simply connects to the AODD pump air exhaust, representing the strokes on the LCD display. Compact, easy to use and cost effective this simple system will allow you to control servicing and implement a preventative maintenance routine.

Mobile solutions for pump units and systems

Mobile pump units are found as the best solution for the users of spread technological processes. The portability of the Units allows easy movement to various locations. This means almost limitless application.



Trolley S 2-wheel

Tapflo standard AODD pumps with capacity up to 125 l/min (pump sizes: up to 100/120, except T80),



Trolley M | 4-wheel

Tapflo standard AODD pumps with capacity up to 570 l/min (pump sizes: up to 400/420, except T425),



Hygienic trolley

Hygienic trolleys offered by Tapflo are available in two sizes. M Trolleys are used for standard pumps up to T425. L Trolleys are used for pump dampener assemblies.

For further details, please check the separate brochure systems & accessories for pumps

Filter regulator & needle valve kit



There are many benefits of using an individual filter regulator and needle valve for your AODD pump. You will always be able to run the pump with right air quality and optimum pressure and speed to save energy. Furthermore the lifetime of pump components will increase. The kit includes a filter regulator, gauge, wall bracket, needle valve, and/ or water separator. The filter is 5 micron and regulator is 0-12 bar, available in sizes 1/8" up to 3/4".

Pneumixer



The Pneumixer was initially developed for the paint and ink industry where most raw materials in drums or containers settle out over time and need to be mixed or blended prior to use. This usually means rolling, shaking or pumping to a mixing vessel; that adds time, waste, mess and expense.

Features & Benefits

- No paddles
- No rotating blades
- Variable agitation
- Suits all containers up to 1000 litre IBC
- No moving parts utilises pump power to mix & dispense
- Eliminates problems with conventional mixing

Transfer mode

The discharge valve is open and the recirculation valve is partially open, to both mix and to transfer the product out of the Pneumix

- No air entrainment
 No shear
 Closed vessel mixing system
 Fully controllable pneumatic
- operation and control
- Reduced environmental exposure
- No need for pumping to mixing vessel

Mixing mode

The discharge valve is closed and the recirculation valve is open, to allow the product to circulate in the container.

TAPFLO AB

Sweden

Filaregatan 4 | S-442 34 Kungälv

Tel: +46 303 63390 Fax: +46 303 19916

E-mail addresses: Commercial guestions: sales@tapflo.com Orders: order@tapflo.com Tech support: support@tapflo.com

Tapflo products and services are available worldwide.

Tapflo is represented by own Tapflo Group Companies and carefully selected distributors assuring highest Tapflo service quality for our customers' convenience.

AUSTRALIA | AUSTRIA | AZERBAIJAN | BAHRAIN | BELGIUM | BOSNIA | BRAZIL | BULGARIA | CANADA | CHILE | CHINA | COLOMBIA | CROATIA | CZECH REPUBLIC | DENMARK | ECUADOR | EGYPT | ESTONIA | FINLAND | FRANCE | GEORGIA | GERMANY | GREECE | HONG-KONG | HUNGARY | ICELAND | INDIA | INDONESIA | IRELAND | ISRAEL | ITALY | JAPAN | JORDAN | KAZAKHSTAN | KUWAIT | LATVIA | LIBYA | LITHUANIA | MACEDONIA | MALAYSIA MEXICO MONTENEGRO MOROCCO NETHERLANDS NEW ZEALAND NORWAY OMAN PHILIPPINES POLAND PORTUGAL QATAR ROMANIA | SAUDI ARABIA | SERBIA | SINGAPORE | SLOVAKIA | SLOVENIA | SOUTH AFRICA | SOUTH KOREA | SPAIN | SWEDEN | SWITZERLAND | TAIWAN | THAILAND | TURKEY | UKRAINE | UNITED ARAB EMIRATES | UNITED KINGDOM | USA | UZBEKISTAN | VIETNAM

Tapflo Group Companies

Australia Tapflo Oceania (Pty) Ltd. Tel: +61 1800303633 sales@tapflo.com.au

Austria Tapflo GmbH Tel: +43 73227292910 sales@tapflo.at

Bahrain Tapflo Gulf General Trading Co. L.L.C Tapflo s.r.o. Tel: +971 58 582 3630 sales@tapflogulf.com

Baltic States Tapflo SIA Tel: +371 67472205 sales@tapflo.lv

Belgium Tapflo Benelux B.V. Tel: +31 (0)850074300 info@tapflo.nl

Bulgaria Tapflo EOOD Tel: +359 (0)29741854 office@tapflo.bg

Canada **Tapflo Canada** Tel: +1 5148135754 canada@tapflo.com

China Tapflo (Wuxi) Pumps Co. Ltd. Tel: +86 51082417072 sales@tapflo.cn

Croatia Tapflo d.o.o. Tel: +385 914884666 sales@tapflo.hr

Czech Republic Tel: +420 513033924 tapflo@tapflo.cz

Denmark Tapflo Danmark ApS Tel: +45 36454600 info@tapflo.dk

France Sarl Tapflo France Tel: +33188788240 info@tapflo.fr

Hungary Tapflo Kft. Tel: +36 30148 8551 office@tapflo.hu

India Tapflo Fluid Handling India Pvt Ltd. Tel: +91 2065000215 ac@tapflo.in

Ireland Tanflo Ireland I td. Tel: +353 12011911 info@tapflo.ie

Italy Tapflo Italia S.r.I. Tel: +39 0362306528 info@tanfloitalia.com

Japan Tapflo Japan K.K. Tel: +81 362403510 tapflojp@tapflo.co.jp

Kazakhstan Tapflo LLP Tel: +7 7273278347 sales@tapflo.kz

Kuwait Tapflo Gulf General Trading Co. L.L.C Tel: +971 58 582 3630 sales@tapflogulf.com

Netherlands Tanflo Benelux B.V. Tel: +31 (0)850074300 info@tapflo.nl

Oman Tapflo Gulf General Trading Co. L.L.C Tel: +971 58 582 3630 sales@tapflogulf.com

Poland Tapflo Sp. z o.o. Tel: +48 585304212 info@tapflo.pl

Oatar Tapflo Gulf General Trading Co. L.L.C Tel: +971 58 582 3630 sales@tapflogulf.com

Romania S.C. Tapflo Rom. S.r.l. Tel: +40 213451255 sales@tapflo.ro

Saudi Arabia Tapflo Gulf General Trading Co. L.L.C Tel: +971 58 582 3630 sales@tapflogulf.com

Serbia Tapflo d.o.o. Tel: +381 21445808 sales@tapflo.rs

Slovakia Tapflo s.r.o. Tel: +421 911137883 tapflo@tapflo.sk

Slovenia Tapflo d.o.o. Tel: +386 68613474 sales@tapflo.hr

Spain Tanflo Ibérica S.L. Tel: +34 918093182 avives@tapfloiberica.es

South Africa Tapflo (Pty) Ltd. Tel: +27 317015255 sales@tapflo.co.za

Sweden Tapflo AB Tel: +46 (0)30314050 info@tapflo.com

Turkey Tapflo Makina Ltd. Tel: +90 2164673311 sales@tapflo.com.tr

Ukraine Tapflo LLC Tel: +380 442226844 sales@tapflo.ua

United Arab Emirates Tapflo Gulf General Trading Co. L.L.C Tel: +971 58 582 3630 sales@tapflogulf.com

United Kingdom Tapflo (UK) Ltd. Tel: +44 2380252325 sales@tapflopumps.co.uk

Uzbekistan Tanflo Uzbekistan Tel: +998 712370940 sales@tapflo.uz

tapflo



If your country is not listed please visit www.tapflo.com/en/contact

www.tapflo.com